

Perfect Fit®

PLEATED, CELLULAR & VENETIAN
Fitting Instructions

ASSEMBLING THE PERFECT FIT FRAME

To assemble your Perfect Fit® blind, there is a simple assembly procedure to follow before fitting may commence. Carefully unwrap the blind components. Unravel all guides and control cords. The blind will have the top and bottom parts of the frame attached together with cord.

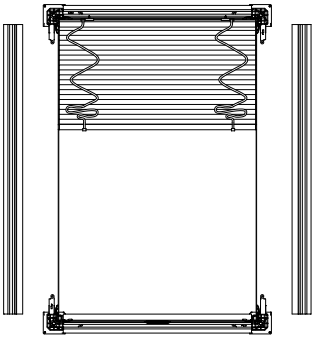


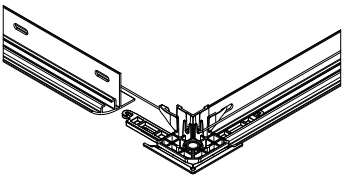


1. Lay out the blind face down on a clean, even surface.
2. Select the left hand frame component and guide onto the exposed arm of the bottom left corner joint.

FITTING CORNER JOINTS

Assemble the bottom of a frame using 2 corner joints (PFP4026). Do this by sliding the joints into your frame section.

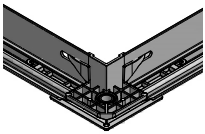


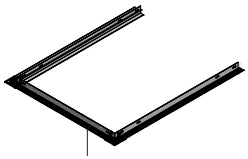

Bottom section

FITTING KLICK FIT CORNER JOINTS



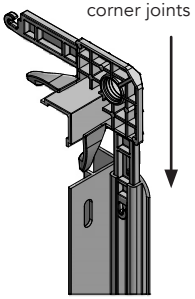



"Klik-fit" corner joints

1. Slide the frame along the arm until secure. Repeat the process on the top left hand corner joint.


   Now follow the same procedure for the right hand side of the frame.


2. Your Perfect Fit® blind is now ready to be fitted.

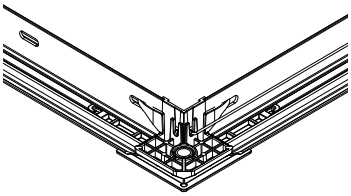

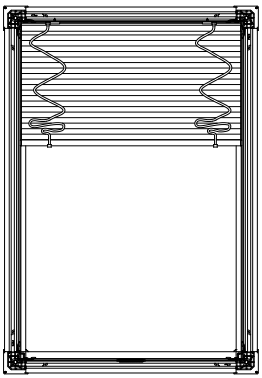

FITTING THE FRAME

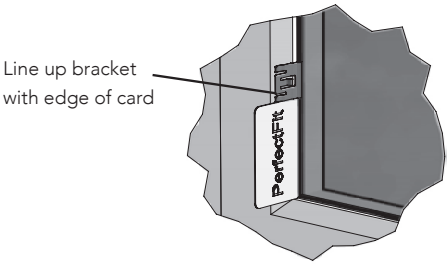

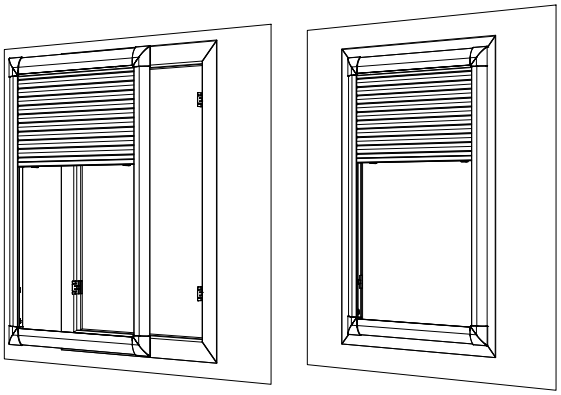

To ensure all brackets are in the correct position measure 85mm from beading or use a credit card in the corner of the window to locate the bracket position.

For ease of insertion, use a lubricant in the form of washing up liquid on the base of each bracket.

Line up the bracket with the base or top of the credit card (depending on which corner of the window you are working) and fit the bracket by pushing it between the glass and the rubber seal of the window.

Repeat for all 4 corners of the window, and intermediate brackets (if required) then clean excess lubricant prior to fitting the frame.

HOW TO REMOVE THE BLIND

- Return blind to the top of the window.
- Remove 1 side at a time by depressing button in the bracket and sliding the frame out.