
Perfect Fit®


ROLLER BLIND (SPRING)
Fitting Instructions

FITTING CORNER JOINTS

Assemble the bottom of a frame using 2 corner joints (PFR4026). Do this by sliding the joints into your frame section.

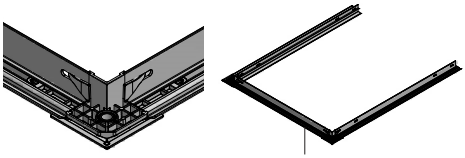

FITTING PUSH FIT CORNER JOINTS

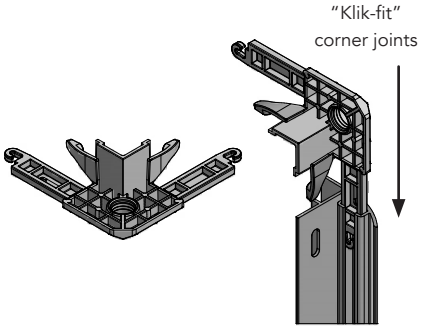


FINAL FRAME JOINT

Slide the curved section into the spring end and then the remaining corner joint needs to be lined up with the top tube and the curved section.


The simplest way to do this is to slide the leg of the corner joint into the curved section.

Before the leg is all the way in, ensure that the bush on the corner joint lines up with the top tube. (1)

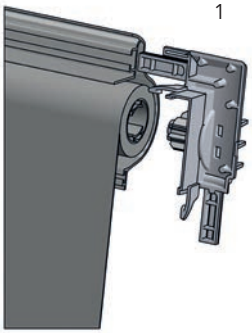

FITTING CURVED TOP SECTION

Slide the top of the curved section into the rest of the frame. Add 'Wrap Tension' (See below for instructions)

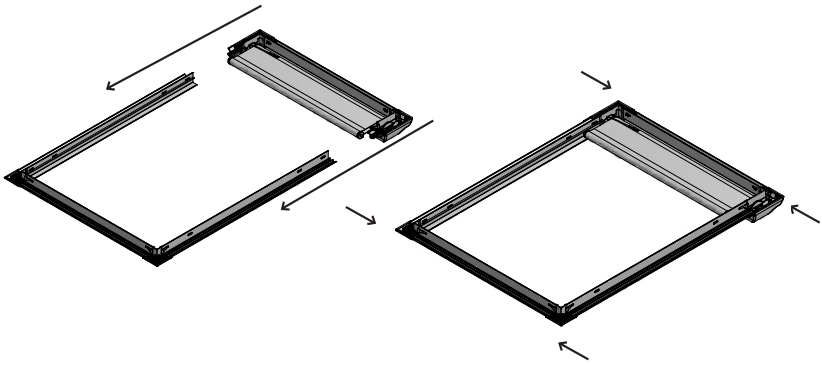


FITTING PERFECT FIT BRACKETS

To ensure all brackets are in the correct position for fitting, use the 85mm side of the fitting card for the bottom brackets. Please use the 122mm side of the card for the top brackets.

For ease of insertion, use a lubricant in the form of washing up liquid on the base of each bracket.

Line up the bracket with the base or top of the fitting card (depending on which corner of the window you are working) and fit the bracket by pushing it between the glass and the rubber seal of the window.


Repeat for all 4 corners of the window, and intermediate brackets (if required) then clean excess lubricant prior to fitting the frame.

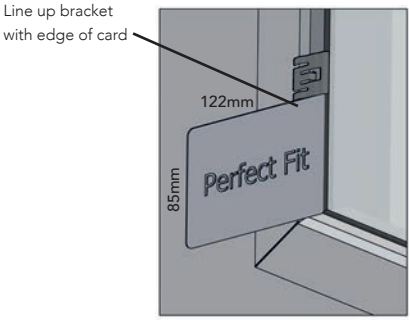


FITTING THE FRAME

Line up the holes in the frame with the brackets.

Firmly press the frame down onto each bracket. Fit one side at a time for an easier installation

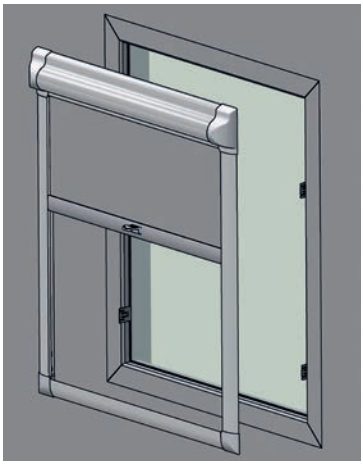

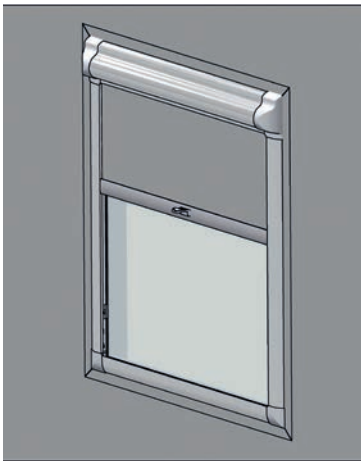


FITTING THE FRAME (Adding 'wrap Tension' if required)


In order for the fabric to roll up, we need to add 'wrap tension' at the top of the blind.

- Pull down the blind (do not manually push back up as it needs to raise naturally with the tension)
- Remove red worm retaining clip.
- Insert a 4mm allen key or angled allen drive attachment (R9002 as shown) into the hexagon slot in the control end. (2)
- Turn 'anti-clockwise' to add tension until the blind starts to lift. (3)
- Tension is complete when the blind is fully opened. (i.e. all the fabric is wrapped around the roller)
- Push the worm retaining clip into the hexagon slot to secure the tension.


2

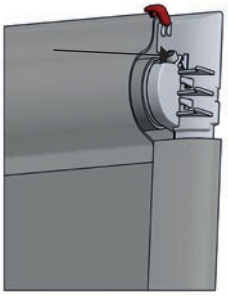


3

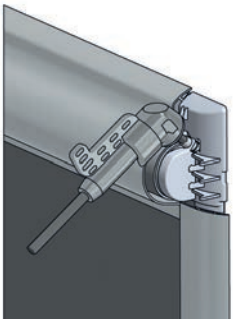

HOW TO OPERATE

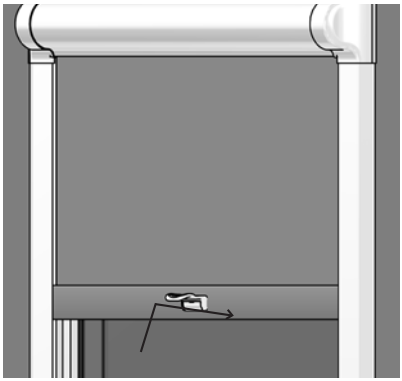

To release the blind, rock the handle forwards. The blind is then free to open and close.

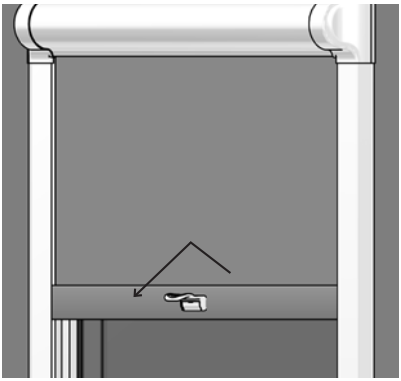

To lock the blind into position, rock the handle backwards.

HOW TO REMOVE THE BLIND

- Return blind to the top of the window.
- Remove 1 side at a time by depressing button in the bracket and sliding the frame out.

